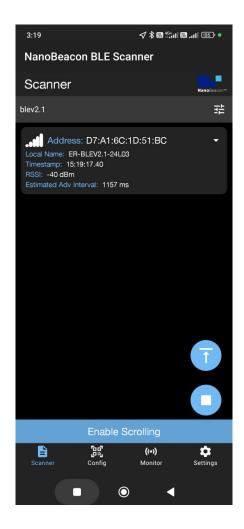1. Overview of BLE beacon.

2. Open NanoBeacon BLE Scanner app and look for "ER-BLEV2.1-XXXX".

3. To get more payload information click on particular device.